



TEMPE FIRE DEPT.

LIGHT RAIL FIELD OPERATIONS GUIDE

EMS CALL ON LRV

- Meet LRV at station*
- Ask train operator to “Key Out ”*
- Remove patient from LRV and treat without compromising patient care*
- Allow LRV to continue after removing patient*
- Be alert for trains coming from any direction at any time*

LRV vs. CAR

- Look for problems in overhead wires and pantograph upon approach*
- Attempt to park on same side of street as LRV*
- Contact Alarm to dispatch LRV Road Supervisor*


ASSESS LRV FOR STABILITY:

- LRV on track?.....Yes,*
- Pantograph stable?...Yes,*



PROCEED

- Ask train operator to “Key Out”*
- Request operator to lower pantograph*

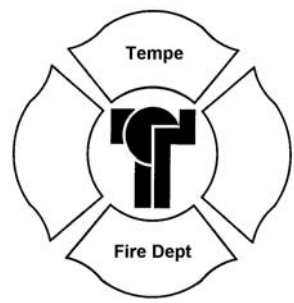

TEMPE F.D. LRV

- Check for fuel leak from vehicle*
- Evacuate LRV if indicated*
- Post flagmen 200' up and down line for safety & notification of approaching LRV*
- Extricate & treat patients*
- Notify LRV Road Supervisor when FD is ready to clear scene*

LRV OFF TRACK OR PANTOGRAPH TANGLED

- Do not approach LRV*
- Contact Alarm Room to alert Operations Control Center (O.C.C.), request power be remotely secured to your incident area & dispatch Road Supervisor*
- Consider securing power at traction powered sub station both sides of incident utilizing Emergency Trip Switch(Located in Knox Box)*
- Isolate and deny entry to effected area*
- Keep passengers in LRV*
- Contact Alarm Room & request Emergency Response Trailer for re-railing LRV*



TEMPE F.D. LRV

WHEN POWER IS SECURED:

- Evacuate LRV***
- Extricate & treat patients***
- Notify LRV Road Supervisor when FD is ready to clear scene***

EMERGENCY CONTACT NUMBER

- Emergency Contact Number for Operations Control Center (O.C.C.)***
602 652-5106